


## 循环录音单块 说明书

感谢您使用本公司产品，在使用本产品之前请仔细阅读本说明书

### 操作说明

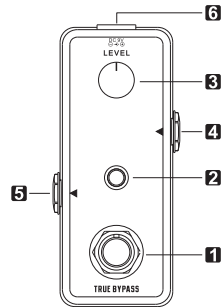

- 1. 状态切换脚踏按键**  
踩下脚踏按键以切换不同的工作状态；
- 2. LCD指示灯**  
显示LOOPER的工作状态；
- 3. LOOPER音量旋钮**  
控制LOOPER播放时的输出音量；
- 4. 输入**  
1/4"单声道音频接口，信号输入；
- 5. 输出**  
1/4"单声道音频接口，信号输出；
- 6. 电源接口**  
9V直流电源(外正内负 ⊕ ← ⊖)；

### 操作步骤

#### 如何录制LOOP/叠加录音

- ◆ LED灯熄灭状态下踩下脚踏按键，红色LED灯亮起，进入录音状态；
- ◆ 在录音状态下踩下脚踏按键，绿色LED灯亮起，进入录音回放状态；
- ◆ 在录音回放状态下踩下脚踏按键，红色LED灯亮起，进入录音叠加状态；
- ◆ 在录音叠加状态下踩下脚踏按键，绿色LED灯亮起，进入录音回放状态；

#### 如何撤销录制

- ◆ 在录音回放/叠加状态下，踩下脚踏开关并保持2秒以上，LED指示灯快速地闪烁两次之后最后的录音数据会被删除；

#### 如何恢复录制

- ◆ 如果你删除了之前的录音数据，但想将其恢复，踩下脚踏开关并保持2秒以上，LED指示灯快速地闪烁两次之后最后删除的录音数据会被恢复；

#### 如何停止/开始/删除录制

- ◆ 录音回放/叠加状态下，快速踩下脚踏按键两次，绿色LED灯闪烁，回放停止；
- ◆ 回放停止状态下，踩下脚踏按键，绿色LED灯亮起，进入录音回放状态；
- ◆ 回放停止状态下，踩下脚踏按键并保持2秒以上，LED灯会熄灭，所有录制数据被删除。


### 技术参数

- ◆ 最大录音时长：10分钟
- ◆ 最大录音次数：无限制
- ◆ 输入：1/4"单声道音频接口(阻抗:470kOhms)
- ◆ 输出：1/4"单声道音频接口(阻抗:100kOhms)
- ◆ 电源供给：9V直流电流(外正内负 ⊕ ← ⊖)
- ◆ 工作电流：94mA
- ◆ 尺寸：95(L)\*41.5(W)\*58(H)mm
- ◆ 毛重：290g
- ◆ 附件：1.使用说明手册,2.USB数据线(与电脑连接上传/下载音频文件，配套上传/下载软件请到<http://www.rowinmusic.com/support.php>下载页面下载)
- ◆ 注：只支持WAV格式的音频文件上传到该效果器

## Looper Pedal Manual

Thanks for purchasing our products, before operating this product, please read the enclosed operating instructions.

### Operating Instructions

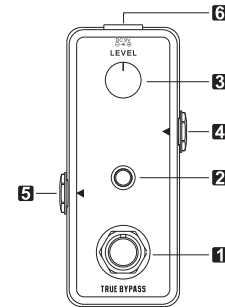

- 1. Function-Switch**  
Press the footswitch to switch among different levels,
- 2. LED Indicator**  
Indicates the different modes of the looper,
- 3. Level Knob**  
Controls the volume of the looper,
- 4. Input Jack**  
1/4" mono audio jack, inputs the signal,
- 5. Output Jack**  
1/4" mono audio jack, outputs the signal,
- 6. DC IN Power Jack**  
DC 9V regulated AC adapter (Center Negative ⊕ ← ⊖).

### How to Use

#### How to record/overdubbing

- ◆ Press the footswitch once when the LED is off, the Red light is on, indicating it is in the Recording mode
- ◆ Press the footswitch once in the recording mode, the Green light is on, indicating it is in the Playback mode
- ◆ Press the footswitch once in the Playback mode, the Red light is on, indicating it is at the Overdubbing mode.
- ◆ Press the footswitch once in the Overdubbing mode, the Green light is on, indicating it is in the Playback mode.

#### How to Delete recording

- ◆ In the Playback/Overdubbing mode, press the footswitch and hold on for at least 2 seconds, the LED will blink twice rapidly, then the last recording is deleted.

#### How to Restore the recording

- ◆ If you want to restore the last recording you have deleted in last step, press the footswitch and hold on for at least 2 seconds, the LED will blink twice rapidly, then the last recording is restored

#### How to Stop/Start/Delete the loops

- ◆ In the Playback/Overdubbing mode, press the footswitch twice quickly, the LED will be blinking in Green, the Playback/Overdubbing is stopped
- ◆ Press the footswitch once when the playback is stopped, the Green light is on, the Playback starts again
- ◆ Press the footswitch and hold on for 2 seconds when the playback is stopped, the light is off, then all recordings are deleted.

### Specifications

- ◆ Maximum Recording Time: 10 Minutes
- ◆ Maximum Overdubbing Times: Unlimited
- ◆ Input: 1/4" Monaural Jack (Impedance: 470K Ohms)
- ◆ Output: 1/4" Monaural Jack (Impedance: 100K Ohms)
- ◆ Power Supply: DC 9V (Plug polarity is Positive on the barrel and negative in the center ⊕ ← ⊖)
- ◆ Working Current: 94 mA
- ◆ Size: 95(L)\*41.5(W)\*58(H)mm
- ◆ G.W: 290g
- ◆ Accessories: 1. Manual 2. USB cable (uploading and downloading with the computer, Please download the software at <http://www.rowinmusic.com/support.php>)
- ◆ Note: Only WAV audio file can be uploaded to the looper from the computer.

尺寸：170\*120 mm  
正反面，边框线不要印