



Guitar Amplifier OD-30

User Manual

JOYO TECHNOLOGY CO.,LTD

Guitar Amplifier

Thank you for purchasing JOYO product!
Please read this User Manual carefully before use to ensure proper operation,
and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS



INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT NOTES


1. Do not use this apparatus near water.
2. Clean only with a dry cloth.
3. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
4. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
5. The apparatus must be earthed.
6. If any abnormal circumstances as below, please turn off the power, plug from the outlet, and contact your local dealer for servicing.
 - Smoke or strange odor emitted from the unit
 - Water or metal object penetrate into the unit
 - The unit dropped or the cover damaged
 - Power cable or cords damaged (wire heart is worn or broken)
 - No sound due to some error
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
8. If the plug or power panel has the function of power off, they should be located in the places of easy access anytime.
9. Only use attachments/accessories specified by the manufacturer.
10. Never use with a cart, stand, tripod, bracket, or table except as specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
11. Unplug this apparatus during lightning, storms or when unused for long periods of time.
12. Do not allow any objects (e.g. metal objects, flammable material, coins, pins) dumped into the unit from the ventilation openings!
13. Attention! Repairing note is for the reference of qualified service personnel. To avoid any risk of electric shock, please do not attempt to repair the unit!



①

Panel Description

Front Panel:

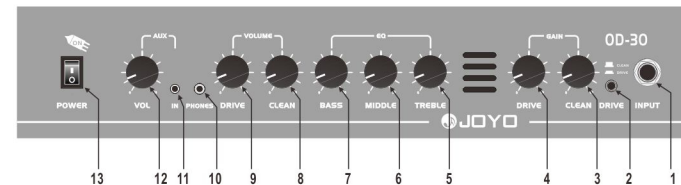

1. INPUT

2. CLEAN/DRIVE

Button used to switch between Clean and Distortion.

3. CLEAN CHANNEL GAIN

Knob used to adjust the gain of clean tones.

4. DRIVE CHANNEL GAIN

Knob used to adjust the gain of distortion tones.

5. TREBLE

Knob used to control high frequency: 3KHz-5KHz

6. MIDDLE

Knob used to control intermediate frequency: based on 500Hz, clockwise rotation to increase and counterclockwise rotation to reduce.

7. BASS

Knob used to control low frequency: based on 100Hz, clockwise rotation to increase and counterclockwise rotation to reduce.

8. CLEAN/VOLUME

Knob used to adjust the volume of clean tones.

9. DRIVE/VOLUME

Knob used to adjust the volume of distortion tones.

10. PHONES

11. AUX/IN

Input interface for 3.5mm stereo earphone, or external audio resources such as CD,MP3.

12. AUX/VOL


Knob used to adjust the volume of external audio resources.

13. POWER

②

OD-30

Back Panel:

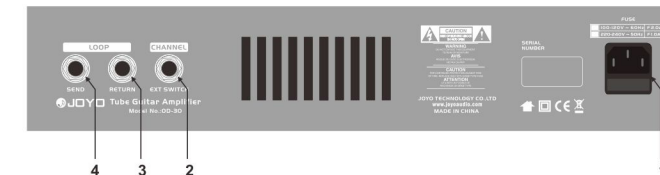

1. FUSE:

The power input socket / built-in fuse holder

2. CHANNEL/EXT SWITCH:

A mono 1/4 " jack for foot switch, mainly used to switch between CLEAN and DRIVE, (Foot switch can be added according to customer's requirement).

3. LOOP/RETUREN

4. LOOP/SEND

Features Of OD30

1x12AX7 tube
1x10in speaker for guitar
Drive and Clean Channel
25W(RMS)
AUX IN
FX Loop



JOYOTECHNOLOGY CO.,LTD

Address: 2/F, Lushi Industry Building, 28th District, Bao'an, Shenzhen, 518101 China.
www.joyoaudio.com Email:info@joyoaudio.com Tel: 0086-755-29765381