


SWAMP Setup Guide

XR-403--XR-405

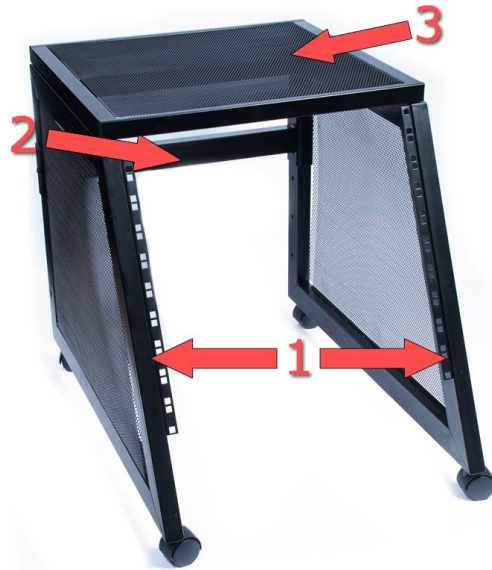

Included Parts:

1. Left Panel (1)
2. Right Panel (1)
3. Support Bar (2) (bolts included)
4. Top Panel (3)
5. 4x Bolts (Top Panel to Left and Right Side Panel)

1. Attach the rear support bar (**Piece 2**), to both side panels (**Piece/s 1**)
(*user may select which height level to attach support bar to*)
Though do not tighten the bolts all the way up, leave them a tad loose.
2. Sit the top panel (**Piece 3**) on top of the side panels, lining up the holes on the side panels, to the screw thread holes on the top panel.
3. Use the 4 bolts provided to attach through the side panel into the top panel.
Start by turning the bolts by hand, and tighten all 4 bolts to only ~20% of full bolt length.
(*ensure that each of the bolts is turning freely*)
4. Tighten the rear support bar (Piece 2) up fully.
5. Turn the unit over (so the top panel is on the ground), then continue to tighten the 4 bolts until the top panel (**Piece 3**) is completely tightened.